

Opener Programming

TEST your Garage Door Opener

- Enter your PIN.
- Press the button with the arrow up / arrow down triangles.

RESET /CLEAR your keypad

(Starting over, Forgot PIN or Changing PIN)

- Press and hold the PROG button. Keep holding while you -
- Press and hold the 6 button. Keep holding while you -
- Press the key with the arrow up and arrow down triangles.

SET Your Wireless Keypad PIN

- Press the following keys in this order: [3] [5] [7] [PROG]
- Red LED blinks -once per second.
- Enter your PIN (3 to 8 characters).
- Press the [PROG] key again.
-Red LED blinks - twice per second and turns off.

PROGRAMMING Door Opener(s):

Before you begin be aware of the following:

For Convenience: Program your keypad BEFORE mounting.

Program Failure: If programming fails at any point [CLEAR/RESET](#) your keypad.

Locate the [Learn Code] button and the [Learn Code] red LED indicator.

Programming ONE Door Opener

- Press the [Learn Code] button once. - The red LED indicator will blink.
- Enter your PIN.
- Press the button with the arrow up / arrow down triangles
-The Learn Code Indicator LED will stay on.
- Press the button with the arrow up / arrow down triangles a second time. -The Learn Code Indicator LED will turn off.
- Press the button with the arrow up / arrow down triangles a third time.
-Garage Door should now move.

Programming 2 or 3 Door Openers

(All Door Openers will use the same PIN)